


# ReBella PEN™

USER MANUAL



®

## Needle cartridge introduction

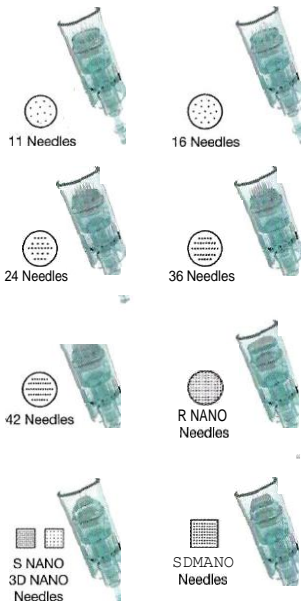

## Specification

Product name:  
Auto-stamp Motorized Meso Machine  
Model name: Rebella Pen  
Adapter: SV-1000mA  
Package Weight: about 419g  
Package Size: 159\*123\*55 mm

### Packing List

Item	Quantity
Hand Piece	1 pc
Adapter	1 pc
Manual	1 pc
Power Cable	1 pc
Charger	1 pc
Batteries	2 pcs
Needle Cartridge	2 pcs

## Precaution

	Be sure to read instructions before use and follow as described
	Do not apply to those who have the following: 1. Who have acute disease or temp of 38° C 2. Who have allergy or hemophilia 3. Who have melanosis of the face 4. Who have high temperature 5. Who are regular hospital visitors 6. Who take medications 7. Who are under 12 years old
	Do not use with anything other than AC 220 V It may cause fire or malfunction
	Do not use in place with high temperature, dust, or humidity (Near a humidifier). It may cause malfunction.
	Do not repair, disassemble, or alter the controller, and the body. It may cause malfunction.
	Do not touch the device or detach the power cord with wet hands. It may cause electrical shock.
	Do not use the stripped cord or the propped cord. It may cause fire. (Be sure to replace it with another)
	Do not use the propped cord which has cracks or scars. (It may harm your skin)
	When not in use for a long time unplug from outlet.
	Be sure to have an inspection test. If any problems are found have it repaired.
	No one other than the operator should touch the device. It may cause accidents or malfunction.

	Alternating current		Serial No.
	Direct current		EU Representative
	Class 1 equipment		CE mark
	Attention, consult accompanying documents		Manufacturer
	Date of manufacture		Floating applied part

## Warranty

The warranty period of the device is 6 months.  
We offer repair to our products from the day  
they are purchased. If any of our products  
have damage or there is trouble, we offer  
repair or replacements.

For Warranty Claims:  
Regen Suppliers  
+1 (888) 568-6909

### General Maintenance


Make sure to inspect the device and adapter  
before use.

Keep it with its power cord off. Wipe its  
surface off with a dry cloth.

Keep it away from direct sunlight or high  
temperature and humidity.

Do not leave the measurement, repair or  
alteration of the device to non-professional  
staff.

When you use the device which has not been  
used for a long time, make sure to check if it  
works properly and safely.

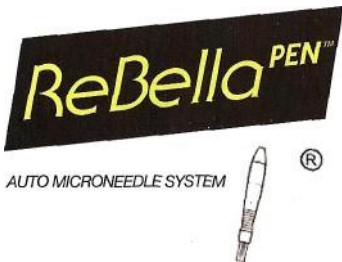


# ReBella Pen<sup>TM</sup>

## USER MANUAL


PLEASE READ THE MANUAL BEFORE USE

### Main host

Speed Display Screen  
 Power/Speed Button

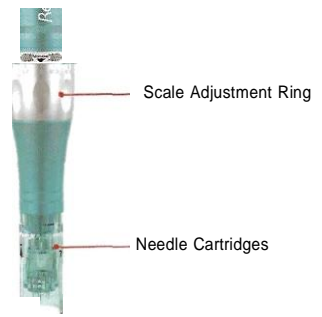

### Parts

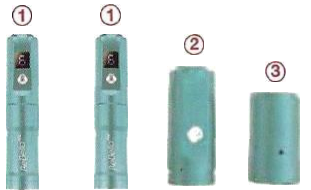

① Battery ① Wired connector ② Charger

#### Wireless Mode

The instrument works with rechargeable battery

#### Wired Mode

The instrument works with alternating current



#### Charging Status

 
The power indicator stays red while charging

The power indicator turns green after charging is completed

### How to operate

#### Preparation

1. Take out needle cartridge from the sterilized packaging.
2. Fit slot of cartridge into pen conctly, push needle cartridge horizontally up to the end.
3. Lock the needle cartridge by turning it counter clock:wise.
4. Turn the needle cartridge clockwise and then pull out horizontally if you want to remove it. (Fig 1)
5. Start the device  
 Press the power button for 2-3 seconds to start or to shut down the device.



(Fig 1)



When assembling or disassembling the needle cartridge, make sure the U-shaped point of the needle can be aligned with the point of the handpiece.

#### Attention

In order to protect the pen, do not invert the instrument to  
 Model: VP-D3 Ltd DCJ30W-



#### Adjustment of needle length

Adjust the depth of needle by turning the scale adjustment ring. The depth of the needle should be adjusted after start of the pen.  
 Turn it clockwise, needle will be shorter.  
 Turn it counterclockwise, needle will be longer.



#### Speed Display



#### Speed Adjustment

The speed after start of the device is the same as the speed before shutdown.

The speed changes once each time you press the button.